 


iPhone 5S

DO-IT-YOURSELF COMPANION

BATTERY



A couple of things you should do before repairing your device:





BACK UP YOUR DATA | POWER PHONE OFF | PLAY SOME TUNES

- 1 Get your SCREWMAT ready.
- 2 Make sure that your device is powered down.
- 3 Put on included tech gloves.
- 4 Remove (2) bottom screws with **pentalobe** driver as shown in **images 4a-4b**.





REMINDER

Use the included SCREWMAT to keep screws organized.







- 1 Use **metal pry tool** to remove screen.
 - THERE IS A SMALL GROOVE ON THE SCREEN ASSEMBLY ABOVE HEADSET JACK THAT CAN BE UTILIZED FOR LEVERAGE WHEN PRYING UP SCREEN.
- 2 Open screen assembly carefully no more than 1" (inch) and proceed to next page.
 - BE AWARE OF AND VERY CAREFUL TO AVOID DAMAGING THE SMALL TOUCH ID FLEX CABLE JUST INSIDE THE OPENING.




- 1 Remove the metal clip covering the Touch ID flex connector with **tweezers** as shown in **images 1a-1c**.
 - THIS PART CAN BE EASILY LOST. PLACE IT ON THE SCREWMAT.
- 2 Gently disconnect Touch ID flex connector with plastic pick as seen in image 2.
- 3 After completing step 2, tilt screen assembly back to open device.

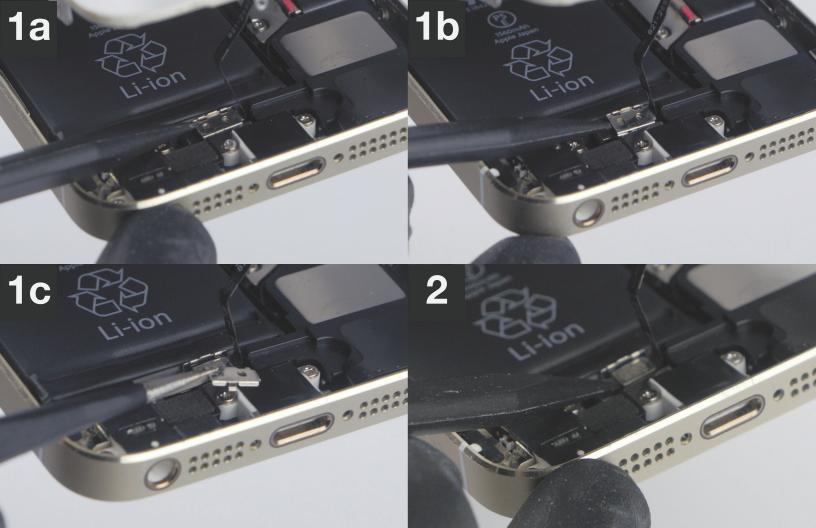


- 1 Remove the (4) shield screws with the **Phillips** driver as shown in **images 1a-1d**.
 - USE SCREWMAT FOR ORGANIZATION OF THESE (4) SCREWS.
- * KEEPING PERFECT ORDER OF THESE (4) SCREWS IS IMPERATIVE DUE TO THE LENGTH OF EACH SCREW. PLACING A SCREW IN THE WRONG LOCATION CAN RESULT IN DAMAGE TO YOUR DEVICE.

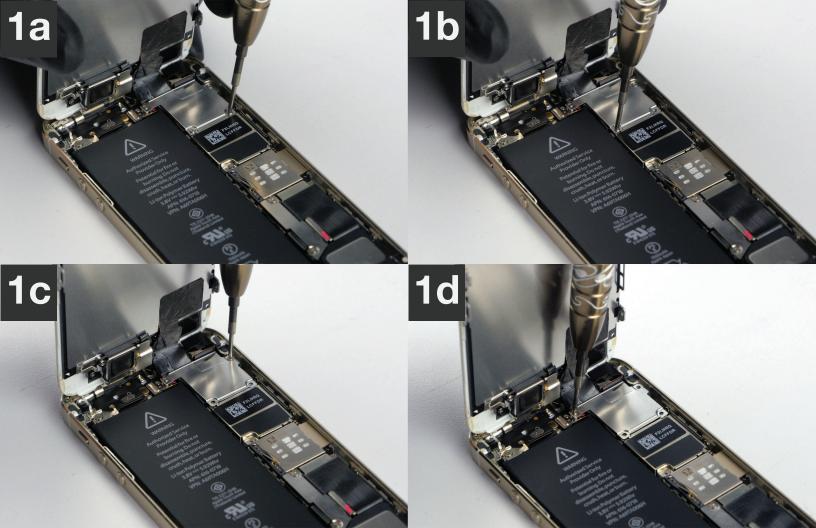

1 Carefully remove the flex shield with **tweezers** as shown in **images 1a-1b**.

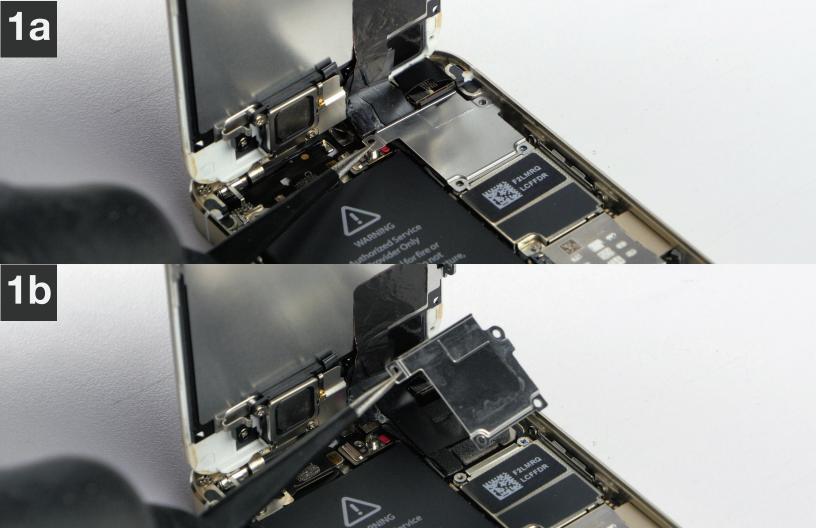


- 1 Gently disconnect flex cables 1-3 using **plastic pick** as shown in **images 1a-1c**.
 - LIFT EACH CONNECTOR UPWARDS TO DISCONNECT.

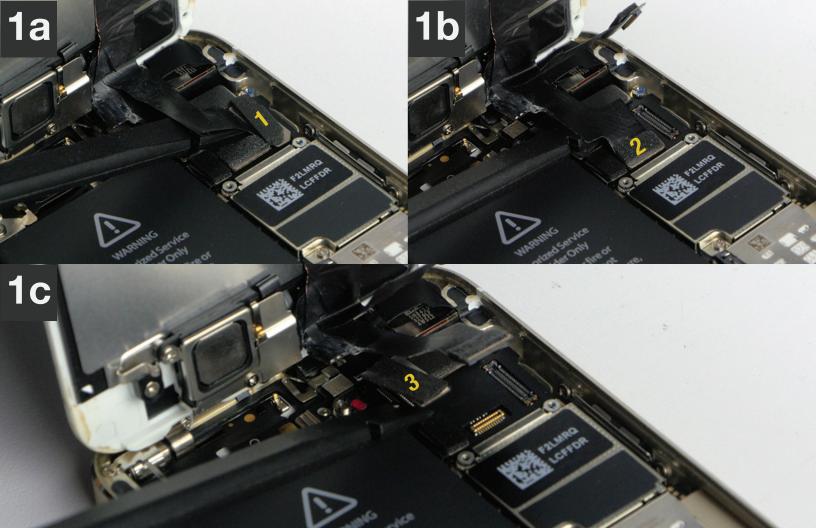

- 1 Remove (2) Phillips screws as shown in images 1a-1b.
- 2 Remove battery shield with **tweezers**. as shown in **image 2**.




- 1 Gently disconnect the battery flex with **plastic pick** as shown in **images 1a-1b**.
- 2 Remove battery by gently prying with **plastic pick** as shown in **images 2a-2b**.
 - THE ADHESIVE BEHIND THE BATTERY IS VERY STRONG. SO, PRY UP VERY GENTLY AND TRY NOT TO PUNCTURE THE BATTERY.
 - CAUTION: A PUNCTURED BATTERY CAN BURN YOU OR START A FIRE.

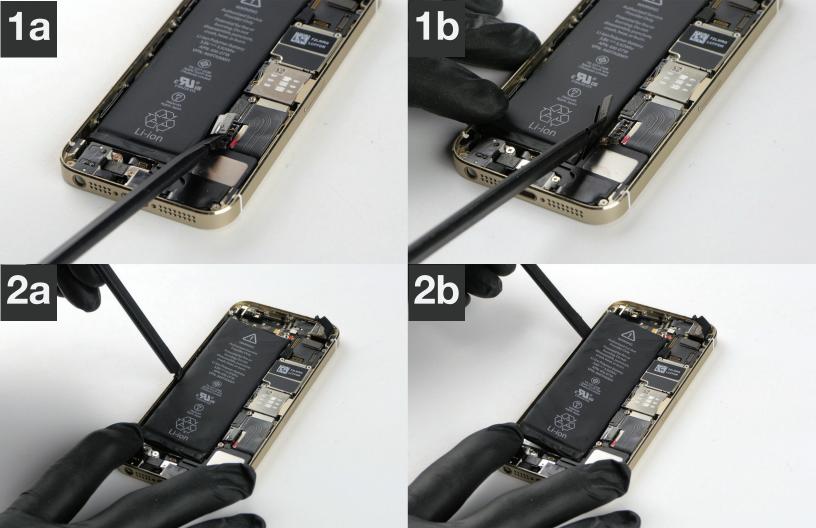


- 1 Insert your new battery.
- 2 Plug in battery flex connector to board.

The Re-Assembly Begins

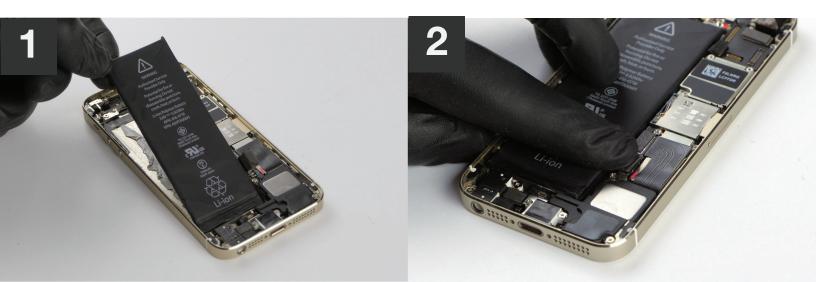


- 1 Align and place the battery shield with **tweezers** as shown in **image 1**.
- 2 Insert the (2) Phillips screws as shown in images 2a-2b.

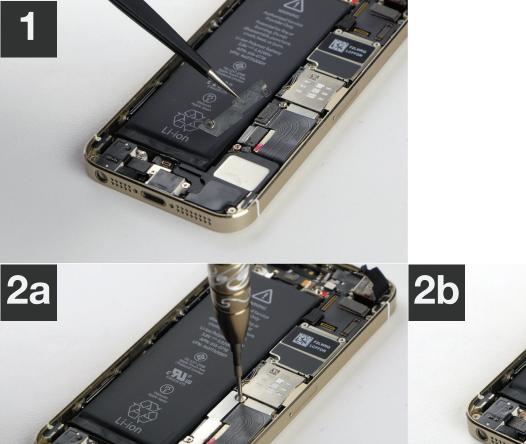




1 Prepare new assembly and plug all (3) flex connectors onto the board as shown in **images 1a-1c**.

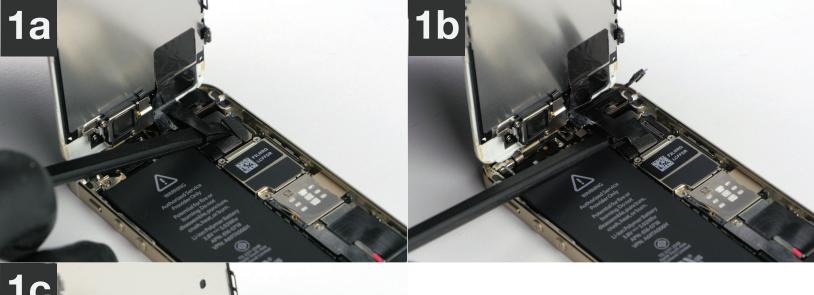




Using your index finger to line these connectors up and press them down is best.


1 Align and place shield back into position with tweezers as shown in images 1a-1b.

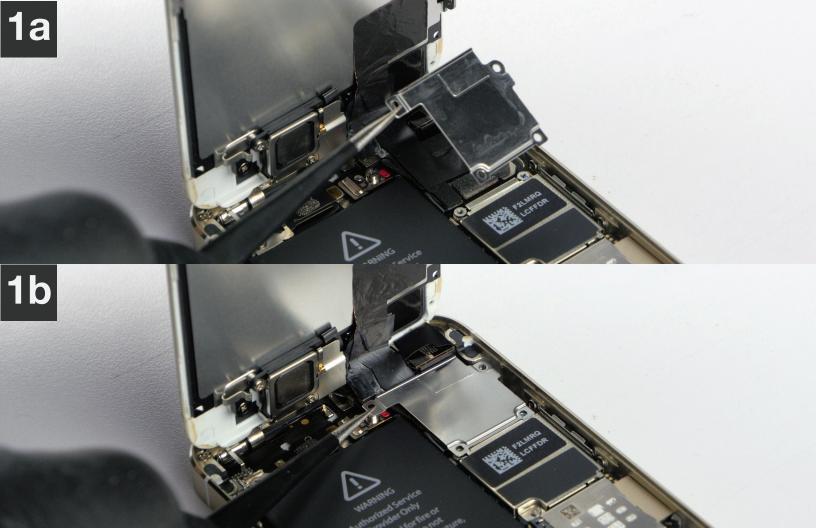

- 1 Insert all (4) Phillips screws as shown in images 1a-1d.
 - ON SCREWMAT.

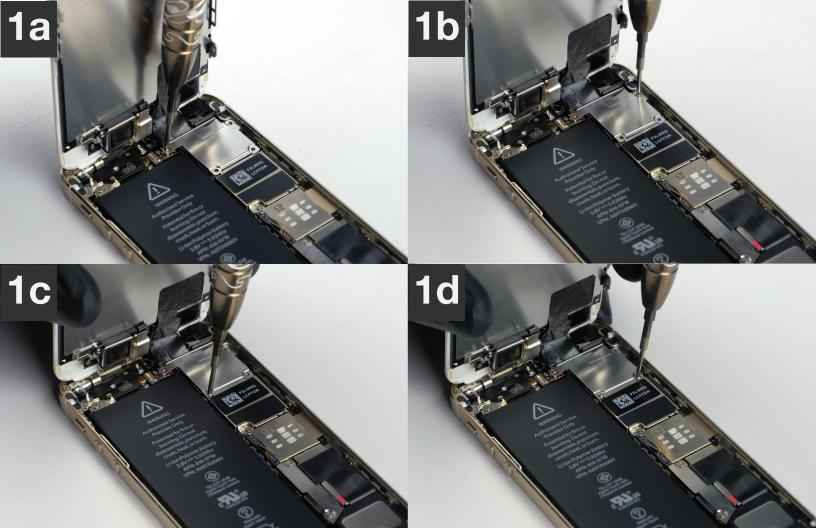


- 1 Carefully connect Touch ID flex, as shown in image 1.
- 2 Align and place Touch ID flex clip into place as shown in images 2a-2b.

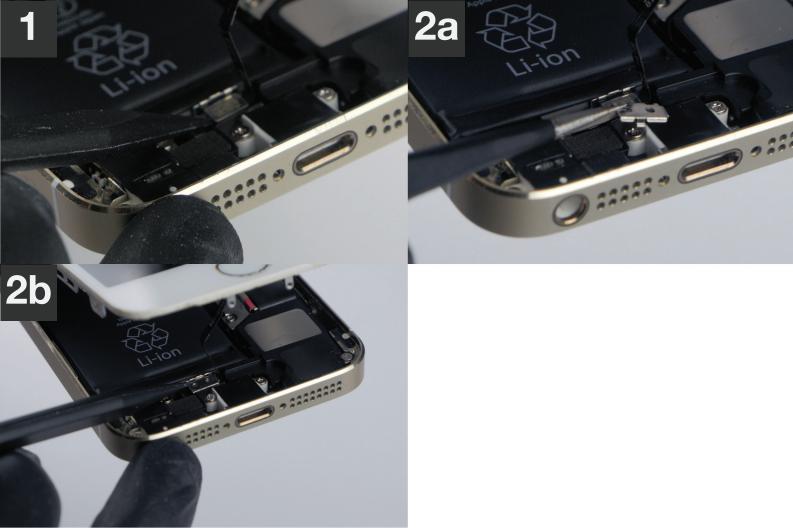

- 1 Close LCD/digitizer into the housing as shown in **images** 1a-1c.
 - FIRMLY AND EVENLY PRESS ON EDGES OF NEW SCREEN ASSEMBLY UNTIL IT GENTLY CLICKS INTO POSITION.



1 Insert the (2) pentalobe screws into housing.

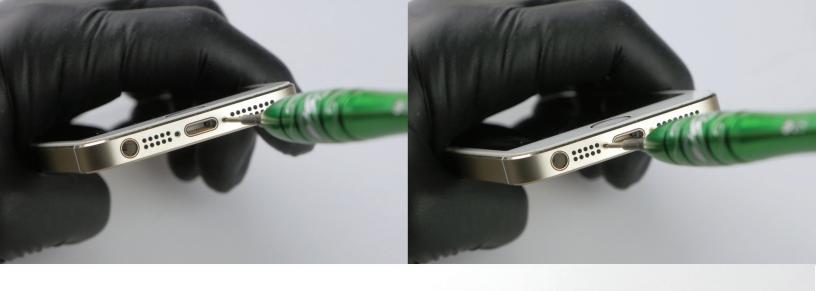

CONGRATULATIONS

You have reached the end of your repair. *Nice work*.

